

*Scraper Adjustment Procedure*

1. The recommended gap between the scraper and disc is 1/32" – 1/16".
2. Locate the 3 adjusting nuts on the seed boot adjuster assembly (Figure 1).



Figure 1

3. As the top nut is tightened (Figure 2), the scraper will move away from the disc (Figure 3).



Figure 2



Figure 3

4. As the forward nut is tightened (Figure 4), the scraper will move closer to the disc (Figure 5).



Figure 4



Figure 5

5. As the rear nut is tightened (Figure 6), the scraper angle will change, moving the bottom closer and top further from the disc (Figure 7).



Figure 6



Figure 7

6. Slight adjustments to each nut will move the scraper into the recommended position (Figure 8).



Figure 8

7. Spin the disc by hand to ensure the scraper is not coming into contact with it.