

Disc Spindle Grass shield installation sheet

- 1 – Remove the old grass shield / seal surface from the spindle.
- 2 – Clean Surface
- 3 – Slide on new grass shield onto the spindle.
- 4 – Slide push block washer onto spindle and allow it to seat itself into grass shield.
- 5 – Slide pipe over spindle and use a hammer or a press to seat grass shield to bottom of spindle.
- 6 – Install new seal and rub a small amount of grease on seal.

